



**RS420**  
LEITOR BASTÃO PORTÁTIL  
TECLADO VIRTUAL

The section header is located on the right side of the page. It features a line drawing of the RS420 device, which is a long, thin, cylindrical handheld reader with a handle on the left and a sensor head on the right. The text 'RS420' is in a large, bold, light blue font. Below it, 'LEITOR BASTÃO PORTÁTIL' and 'TECLADO VIRTUAL' are written in a smaller, light blue, sans-serif font.

**MSD**

Saúde Animal

# RS420

LEITOR BASTÃO PORTÁTIL




**MSD**  
Saúde Animal


1. Abrir o programa da Allflex , o Tag Manager, e selecionar a opção **“Teclado Virtual”**.




2. Criar uma planilha de Excel e personalizar como preferir. Segue exemplo de dados que vamos utilizar.

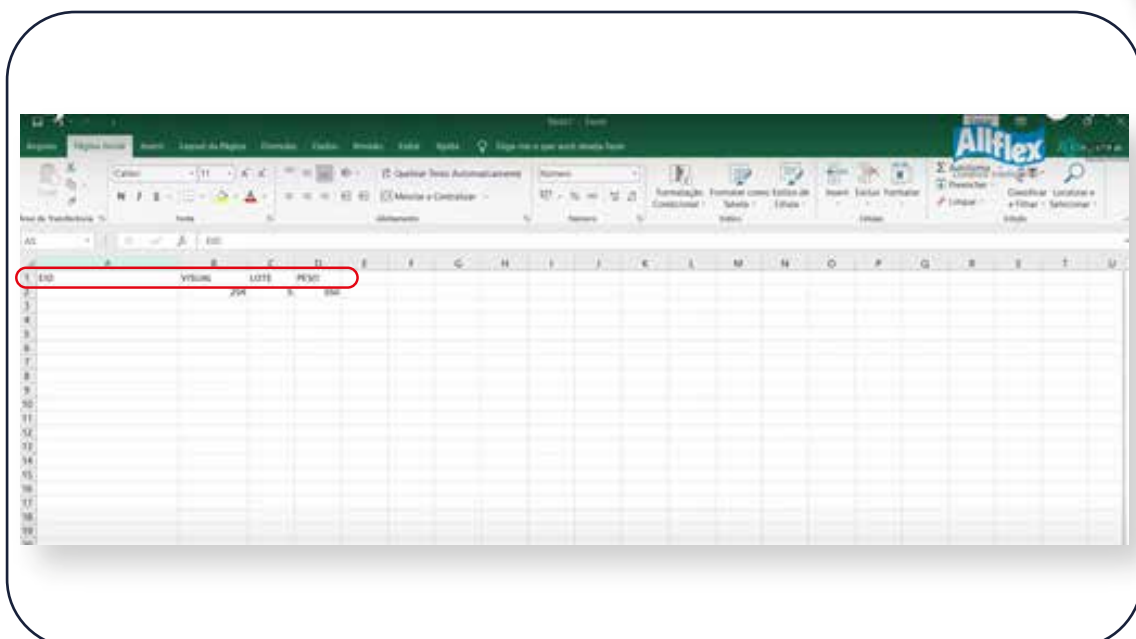

3. Deixando a planilha aberta em segundo plano, vamos para o programa e pressione fixamente com o botão **ESQUERDO** do mouse a opção “**Escolher uma aplicação externa**”.

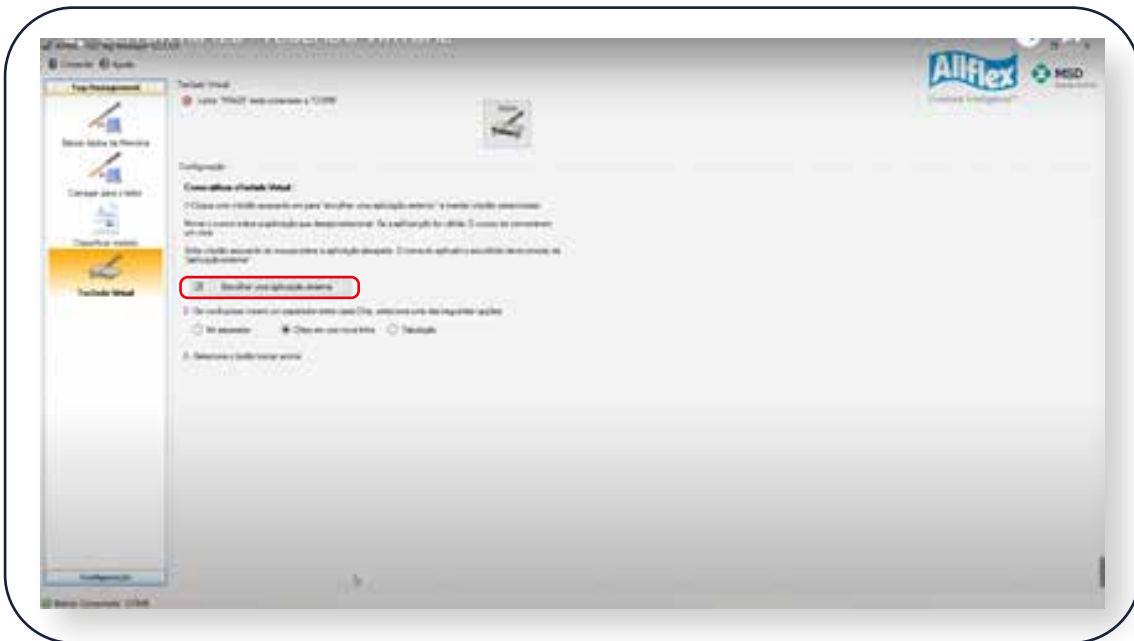


4. Automaticamente, a planilha de e Excel que você deixou em aberto aparecerá e, no lugar da seta do mouse, terá um símbolo de alvo como demonstrado pela seta abaixo. Com o dedo ainda pressionando o botão **ESQUERDO** do mouse, basta soltar dentro da planilha de Excel.

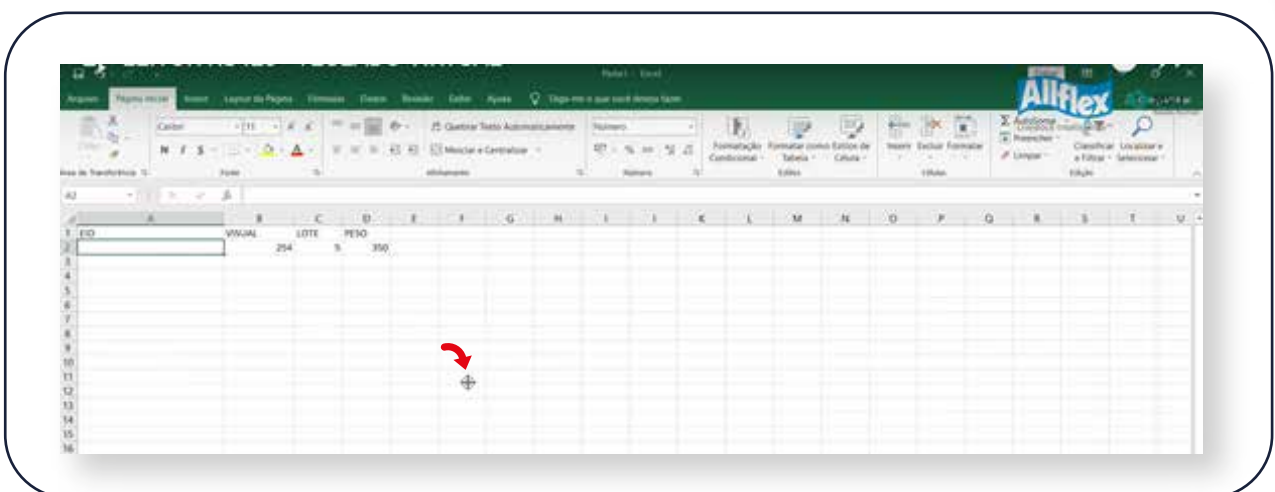


# RS420


## LEITOR BASTÃO PORTÁTIL

5. Feito isso, retorne no programa Tag Manager e clique em **“Início”**.

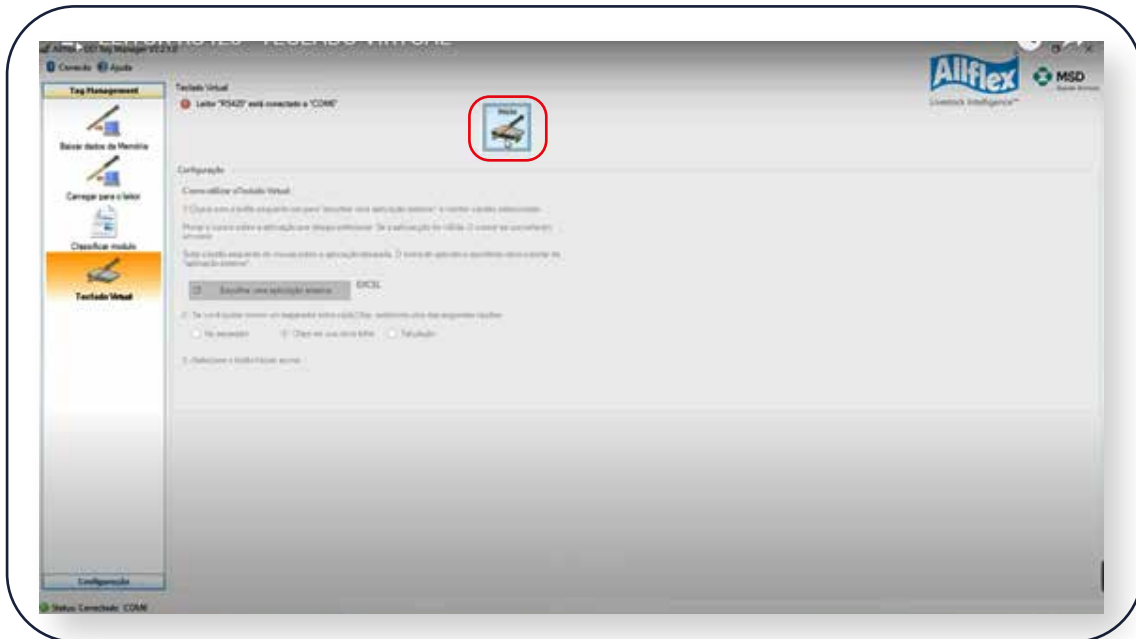

6. Automaticamente, a planilha irá sobrepor e basta fazer a leitura do brinco com o bastão.

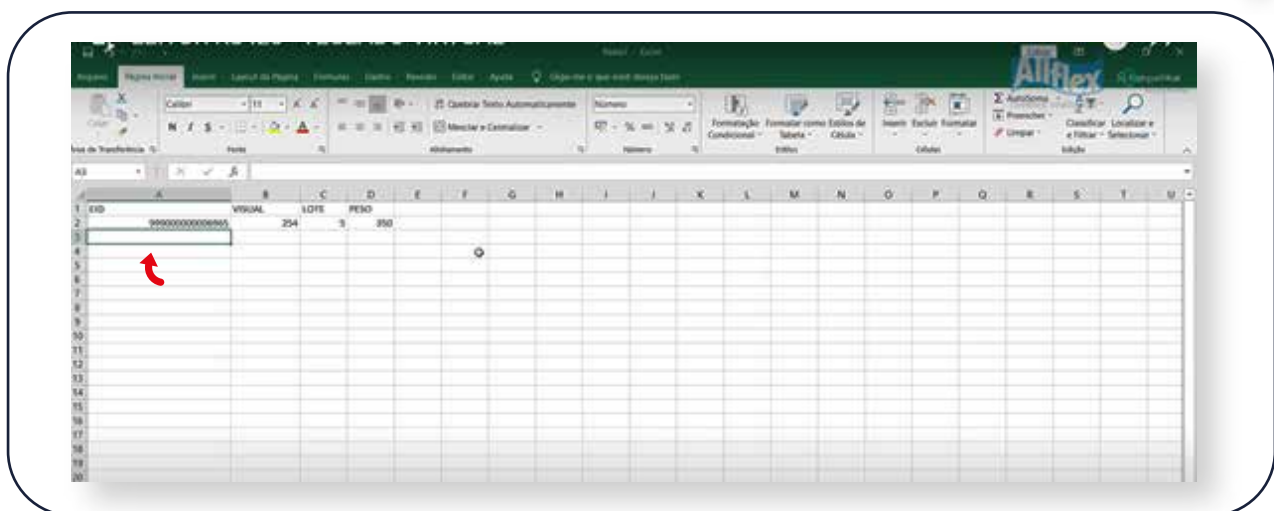



# **RS420**

LEITOR BASTÃO PORTÁTIL  
**TECLADO VIRTUAL**



**MSD**

Saúde Animal