



Allflex RS420 Dual Stick Reader & eList App

User Guide



Devices



RS420 Dual Stick Reader



Allflex eList App
iOS and Android Platforms

How to set up eList App

- 1) Search for "Allflex eList" in Apple App Store or Google Play Store
- 2) Open App and begin setup configuration



What information are you looking to collect?

- Visual ID
- SCR Dairy Ear or Collar Device
- Allflex EID
- Allflex TSU


Setting Custom Fields (Optional)

- Animal Weight
- Tag Details





How to set up eList App

Connecting devices to Bluetooth

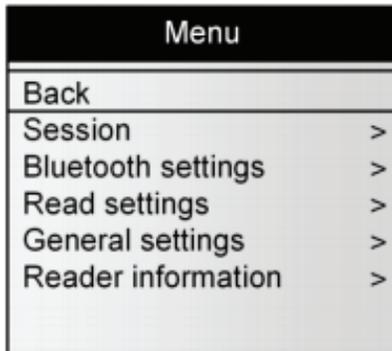


- 1) Connect iOS or Android device to Bluetooth in device settings
- 2) Turn on Bluetooth capability in RS420 Dual Stick Reader and select appropriate mobile device

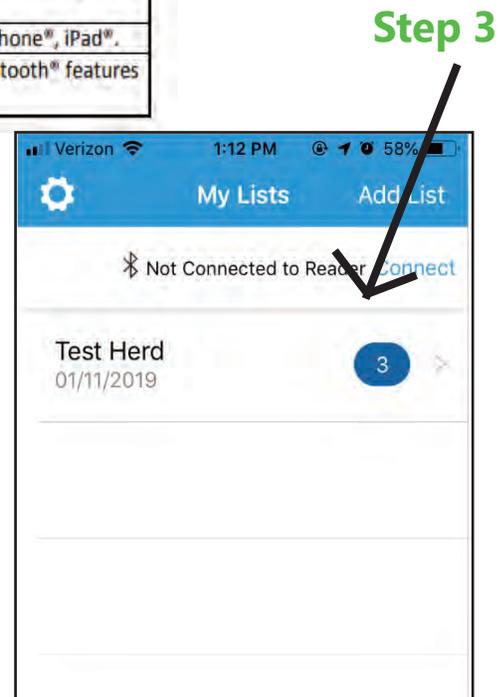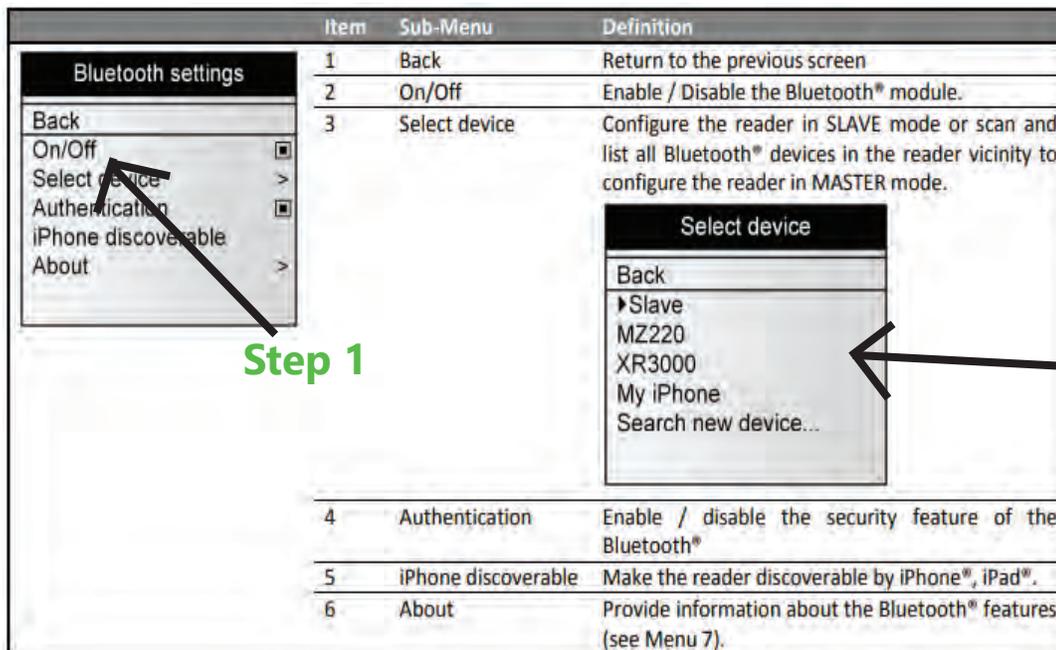

- 3) Select "Connect" in Allflex eList App and choose RS420 Dual Stick Reader


Creating a New List

- 1) Add a new list by selecting "Add List"
- 2) Give new list an appropriate name
- 3) Click on new list to start recording

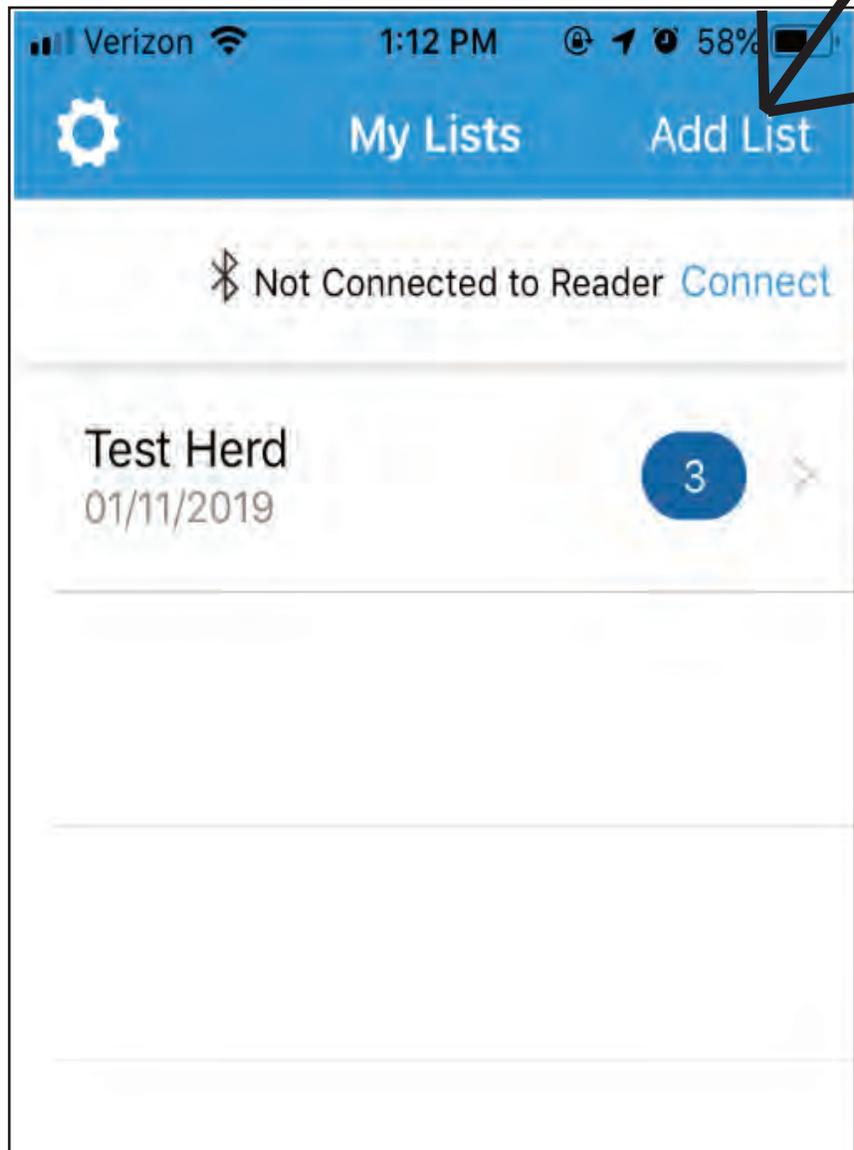

Scanning Tags

- 1) Push bottom button on RS420 Dual Stick Reader to enable scan mode (red light will constantly flash)
- 2) Use end of RS420 Dual Stick Reader to scan Allflex EID tag
- 3) Manually key in cow visual ID number
- 4) Use green-colored shaft of RS420 Dual Stick Reader to scan SCR Ear or Neck Collar Tag (gray or blue tags ONLY)

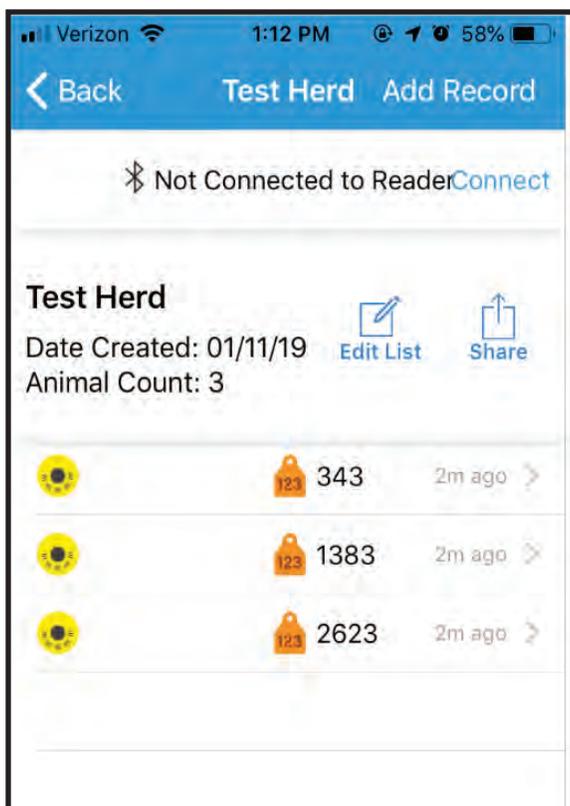

Exporting List

- 1) Select "Share"
- 2) Choose method of export

Note: List will export as a .CSV file to allow for direct import into 3rd party softwares.





(608) 237-3170

Press 1: Technical Support

Press 2: Warehouse

Press 3: Customer Service

www.allflex.global/us



Livestock Intelligence