

Resource Catalog



Destron Fearing™
by Allflex



SCR by Allflex
Make every cow count





Index

1	Animal Identification & Intelligence	22	Handheld EID Readers
2-3	Cattle Tags (2 Piece Tags)	23	LPR EID Reader
4-5	Swine and Multi Species Tags	24	Aleis Fixed Wands and Neckbars
6	Sheep Mini Tag	25	Aleis Panel Readers
7	ATag™ Cow and Calf (1 Piece Tags)	26	Managing EID Data
8	Allflex Feedlot Tags	27	Tag Look Up
9	ATag™ Feedlot	28-29	Tissue Sampling Technology
10	Advantage Feedlot Tags	30	EM Syringes
11	Custom Feedlot Tags	31	Repeater Syringes
12	Tag Marking Pens	32	UM Syringes
13	Custom ID	33	Draw off Syringes
14-15	Applicators	34	Multi Purpose Dosing Instruments
16	Electronic ID	35	Drenchers/Injection Bars
17	Matched Pair Sets	36	Instrument Care
18	Official Tags	37	Destron Fearing Introduction
19	Tag Placement	38-39	DF Masterline Syringes
20-21	SCR	40-41	Destron Fearing Tags

Get The Allflex Advantage

Allflex has more experience in livestock identification than any other manufacturer and we're committed to helping people with high quality products needed in the livestock industry. For products that exceed industry standards for performance, you can rely on Allflex. As an Allflex customer, you'll benefit from a proven track record for innovation, new products and unparalleled product delivery and service.

Innovation: From pioneering electronic identification systems and creating the first custom, laser Ink, marked visual identification tag, to leading the industry in tamperproof tags, to laser-ink marking, Tissue Sampling Units and animal health monitoring, we're dedicated to finding new and better products for the market we serve.

New Products: We consistently introduce new and improved products based on sound manufacturing and an understanding of how those products need to perform in real-world conditions.

Service: Count on Allflex's professional field sales, customer service and technical staff who will help identify the right solution for specific operations and share best practices to achieve the maximum in product performance. You can count on reliable supply and delivery ... which means producers will have the tags and equipment when they need it.

For questions about these products or how to get started, contact Allflex at 1-800-989-TAGS (8247) or visit www.allflexusa.com.

Animal Intelligence, For Life™



With over 60 years in the animal identification business, we've been involved in some of the most important technology advances in our industry: from laser-ink marking to electronic ID and from tissue collection to our venture with SCR animal health monitoring.

We provide the tools to manage cows in more ways than ever before.




800.989.8247 • www.allflexusa.com

See our tissue sampling products on pages 28-29 and our introduction to Animal Health Monitoring on pages 20-21.

Animal Intelligence, For Life™

Global Tags for Cattle

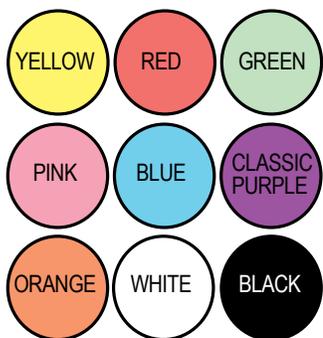

Allflex Global Tags are packaged standard in sets of 25 – blank or numbered sequentially. Other tag combinations are available upon request.

BLACK tags available in Super Maxi, Maxi and Large Female only. Black tags are laser marked with white characters.

CLASSIC PURPLE available in Maxi and Large Female only.



Global Super Maxi Female

Size: 4 5/8" high x 3" wide

Product Code: GSXF/GSM

Global Super Maxi Female

- Used primarily for mature cattle
- Laser-ink management number standard
- Largest panel for management information
- Highly visible from both front and back
- Especially useful in cold climates for animals with longer hair
- Packaged standard with Global Small Male



Global Maxi Female

Size: 4" high x 3" wide

Product Code: GXF/GSM

Global Maxi Female

- Our most popular size for both mature cattle and calves
- Laser-ink management number standard
- Excellent for beef and dairy cattle
- Packaged standard with Global Small Male



Global Large Female

Size: 3" high x 2 1/4" wide

Product Code: GLF/GSM

Global Large Female

- Used primarily for calves
- Laser-ink management number standard
- For use in beef and dairy cattle
- Packaged standard with Global Small Male



Global Large Male

Size: 2 3/4" high x 2 1/4" wide

Product Code: GLM

Global Large Male

- Best used for beef and dairy cattle
- Provides visibility from behind an animal
- Can be used in combination with any Allflex Global Female tag
- Packaged standard without female tags (quantities of 25)

Tamperproof™ Tags for Cattle



Tamperproof™ Maxi Female (Ultra Cap™)

Size: 4" high x 3" wide


Product Code: GTXF/GSM



Tamperproof™ Large Female (Ultra Cap™)

Size: 3" high x 2 1/4" wide

Product Code: GTLF/GSM

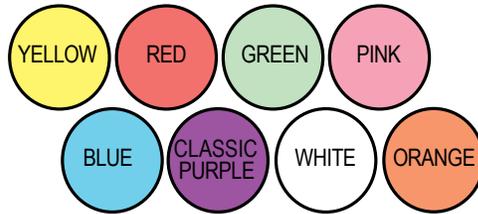

Patented Allflex Tamperproof™ ear tags offer the foremost security in livestock identification and management.

- Tamperproof™ tags are ideal for Official Registration and Certification Programs, as well as Official ID markets
- Allflex Tamperproof™ Female tags feature either the exclusive Ultra Cap™ or the Rotaclip™ design
- Can be used in combination with any Allflex male tag
- Packaged standard with Global Small Male




Tamper-evident Small Female (Rotaclip™)

Size: 1 3/16" diameter

Product Code: GSTF

Allflex's Exclusive Ultra Cap™

Tamperproof™ Maxi Female and Tamperproof™ Large Female

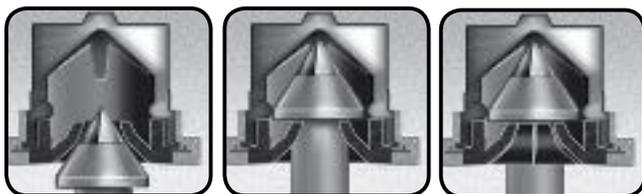

1

On entry into female, the male tip forces the exclusive Ultra Cap™ to spring open inside.

2

When tip has fully entered, Ultra Cap™ snaps back to lock tag solidly in place.

3

Ultra Cap's™ hard ridge and female's molded ridge doubly secure tag. Ultra Cap™ allows female to turn on male stem to help prevent snagging.

Allflex's Exclusive Rotaclip™

Tamperproof™ Small Female



1

On entry into female, the male tip forces the exclusive Rotaclip™ to spring open inside.

2

When tip has fully entered, Rotaclip™ snaps back to lock tag solidly in place.

3

Rotaclip's™ hard ridge and female's molded ridge doubly secure tag. Rotaclip™ allows female to turn on male stem to help prevent snagging.


Identification for Swine

Piglet Tag Colors



Piglet Tag *LASER MARKING ONLY*


- Lightweight tag and unique metal-free tip – specifically designed for piglets from birth to 40 lbs.
- Enhanced plastics minimize the effects of biting and chewing
- Designed to avoid over-application and infection problems
- Durable laser marking

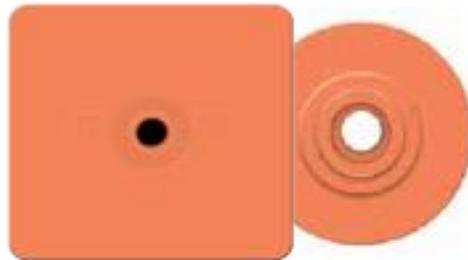

Piglet Tag
Size: 1 1/4" high x 1 1/4" wide
Product Code: PT/GSF

Integra™ Hog Male

- Large panel holds more management information
- Longer male stem allows for higher tag placement in ear
- Lays flat to resist snagging and chewing
- Laser-ink available on management numbers larger than 1/2"
- Used in combination with Global Small Female and Tamperproof™ Small Female tags

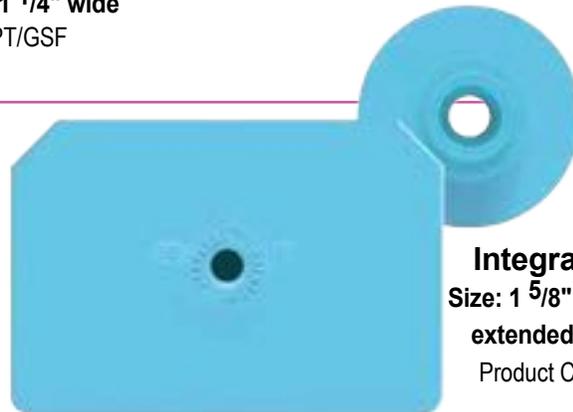

Integra™ Hog Male
Size: 1 5/8" high x 2 1/4" wide,
extended shaft, closed tip
Product Code: GIHM/GSF
GIHM/GSTF

Official USDA Swine Premises Tags

- Tags must be applied prior to harvest channel entry
- Tags must have premises ID number and shield
- Cull sows and boars required to have PIN tag
- PIN of last farm required
- Additional colors now available



Size: 1 5/8" high x 2 1/4" wide,
extended shaft, closed tip
Product Code: USDA-GIHM1/GSTF-COLOR


Front

Back

Button


Global Hog Male

- Longer male stem allows for higher tag placement in ear
- Lays flat to resist snagging and chewing
- Laser-ink available on management numbers larger than 1/2"
- Used in combination with Global Small Female and Tamperproof™ Small Female tags

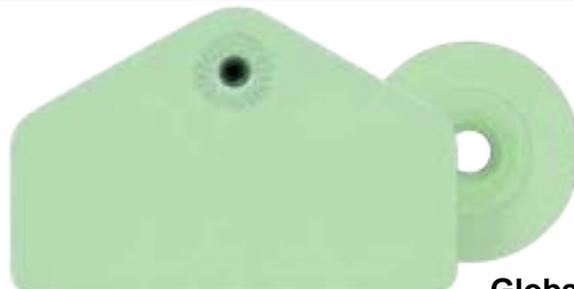

Global Hog Male
Size: 1 1/2" high x 2 1/4" wide,
extended shaft, closed tip
Product Code: GHM/GSF
GHM/GSTF

Integra and Hog Male Colors

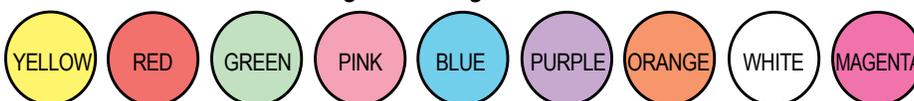

Global Tags for Multi-Species



Global Sheep Female



Global Sheep Male

Size: 2" high x 5/8" wide

Male Size: 2" high x 5/8" wide

Product Code: GPF/GPM

Global Sheep Female and Global Sheep Male

LASER MARKING ONLY

- Provides good visibility without weighing ear down
- Global Sheep Female and Global Sheep Male packaged standard in sets of 25 – blank or numbered sequentially
- In numbered sets, both male and female are laser marked
- Available in yellow, red, green, pink, blue, orange and white (not available in purple or magenta)


Global Sheep Tag Colors



Global Medium Male

Size: 2" high x 1 5/8" wide

Product Code: GMM/GSF

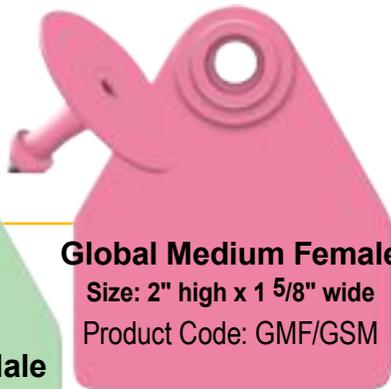

Global Medium Female

Size: 2" high x 1 5/8" wide

Product Code: GMF/GSM

Global Medium Female

- Used for calves, hogs, goats and sheep
- Laser-ink available on management numbers larger than 1/2"
- Packaged standard with Global Small Male

Global Medium Male

- Packaged standard with Global Small Female
- Laser-ink available on management numbers larger than 1/2"
- Also available blank in packages of 25 without female companion



Global Small Male

Size: 1 3/16" diameter x 7/8" shaft, closed tip

Product Code: GSM
GESM

Global Small Male

LASER MARKING ONLY

- Self-piercing tip
- Engineered for superior retention
- Numbered Global Small Male packaged standard with blank Global Small Female
- Also available with extended shaft for thicker ears
- Available blank in packages of 25 without female companion



Global Small Female

Size: 1 3/16" diameter


Product Code: GSF

Global Small Female

LASER MARKING ONLY

- Blank Global Small Female packaged standard with Global Small Male, Medium Male, Hog Male, Integra Hog Male and Piglet tags
- Also available blank in packages of 25 without male companion

Global Medium and Global Small Tag Colors

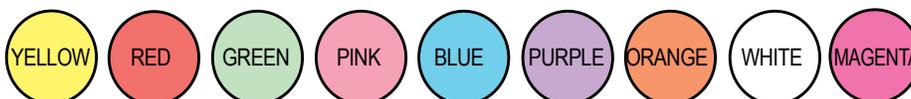


Sheep Mini

Sheep Mini

LASER MARKING ONLY


- Light weight and flexible enough for the smallest goat kids and lambs
- Easy to apply, utilizes Allflex Universal Total Tagger
- Durable laser mark
- Used In Official Livestock programs including the USDA Scrapie Eradication program
- Packaged in bags of 20

Size: 1 1/2" high x 1 1/2" wide



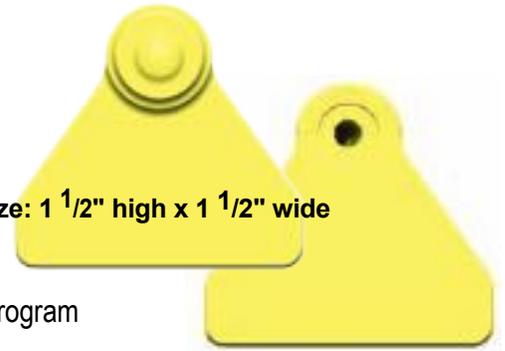


Product Code: SMF/SMM

Tag Colors:

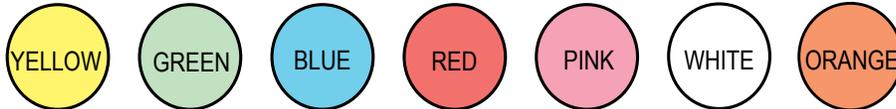

Tag Application for two-piece Tags

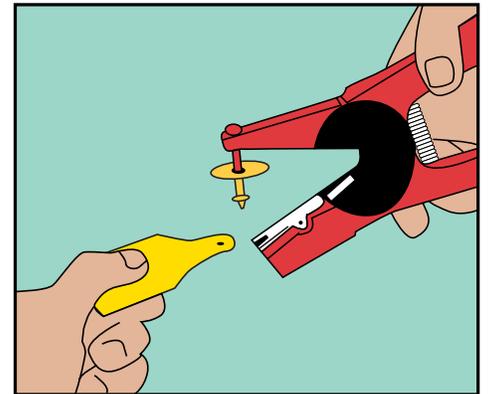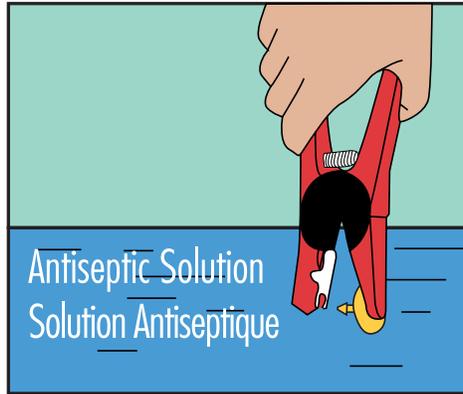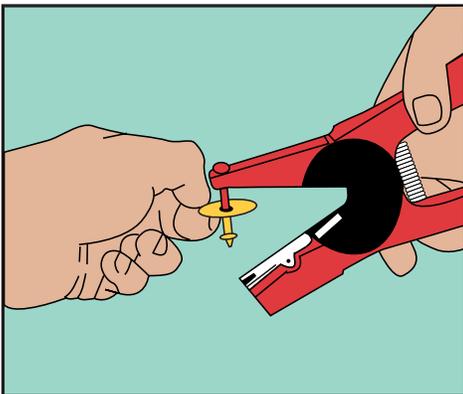

ATag™ One-Piece Tag

ATag™ One-Piece Tag



COW
4.5" high x 3" wide

Product Code: ATAGX



CALF
3.875" high x 2.5" wide


Product Code: ATAGL

- Quality materials and construction in new, one-piece tag
- Two convenient sizes
- Patented laser-ink permanent marking
- Custom marking and numbering available by special order
- Easy one-piece application
- Self-piercing, pinhole tip means faster healing, reduced animal stress
- Black ATags are laser marked with white characters.

One-Piece Self-Piercing Tip



Cow/Calf Tag Colors:

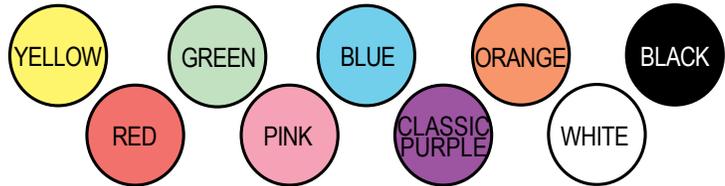

ATag™ One-Piece Applicator

- To be used exclusively with ATags™



Product Code: APP-ATAG



Allflex Feedlot Tag



Allflex Feedlot Tag
 Size: 4 1/4" high x 3" wide
 Product Code: FL

Allflex Feedlot



TWO NEW COLORS!

Allflex Feedlot Tags are stocked in standard packages of 50 blank tags. Lot numbering, sequential numbering and custom marking are available by special order.

Allflex Feedlot Tag

- One-piece tag engineered for retention and readability
- Small oval incision of Allflex Feedlot Tag results in quicker healing
- Large panel for multiple lines of information and custom marking
- Apply with Allflex Feedlot Applicator (Manual or Air)



Allflex Feedlot Tag Applicator
 Product Code: APP-FL

Manual Allflex Feedlot Tag Applicator

- Easy to use for safe feedlot tag application
- Replacement anvil and pin available
- To be used exclusively with Allflex Feedlot Tags



Compressed Air Allflex Feedlot Tag Applicator

Compressed Air Allflex Feedlot Tag Applicator

- Designed for volume tagging
- Easy to use for safe feedlot tag application
- Replacement pin available
- Available for lease to Allflex feedlot customers
- To be used exclusively with Allflex Feedlot Tags

For lease terms, contact your local Allflex distributor or Allflex regional manager

ATag™ One-Piece



ATag™ Feedlot Tag
Size: 4 1/2" high x 3" wide
Product Code: ATAGF



ATag™ Feedlot Tag

- Self piercing, pinhole tip means faster healing, reducing animal stress
- Easy one-piece application
- Small incision results in quicker healing
- Apply with Allflex One-Piece Applicator

ATag™ One-Piece Applicator

- For use with ATag™ One-Piece Tag
- Deep jaw makes proper placement easier
- Grip is designed to ease hand fatigue from repeated use
- Replacement applicator pin located in handle



ATag™ One-Piece Applicator
Product Code: APP-ATAG

Advantage Feedlot Tags

Advantage and Maxi Advantage Feedlot Tag Colors



Advantage Feedlot Tag
 Size: 4 3/4" high x 2 3/4" wide
 Product Code: AF

Advantage Feedlot

- Unique shape with more panel space for marking
- Engineered neck and shoulder to reduce twisting
- Advanced pliable material for longevity and easy stamping
- Custom marking and on-site hot stamping options
- Fast application with the Allflex Easy Applicator Knife



Maxi Advantage Feedlot Tag
 Size: 5 1/2" high x 2 3/4" wide
 Product Code: MAF

Maxi Advantage Feedlot

- Unique shape with extra large panel space for marking
- Engineered neck and shoulder to reduce twisting
- Advanced pliable material for longevity and easy stamping
- Custom marking and on-site hot stamping options
- Fast application with the Allflex Easy Applicator Knife

Allflex Tag Knife

- To be used exclusively with the Advantage and Maxi Advantage feedlot tags
- Grip design allows for speedy tag application
- Stainless steel heat treated blade



Allflex Easy Applicator Knife
 Product Code: APP-FL-KNIFE

Custom Feedlot Tags



FL2

Product Code: FL2-COLOR-SS



FL19

Product Code: FL19-COLOR-SS

Additional customization can be stamped at feed yard using Allflex Hot Stamp Press.



AF1

Product Code: AF1-COLOR-SS



MAF8

Product Code: MAF8-COLOR-SS



Factory printed numbers are high resolution ink only.

[Additional Custom Layouts Available](#)



Allflex Hot Stamp Press

- Digital tag counter
- Stamps all types of Allflex Feeder tags
- Smaller, more compact
- Digital controls for temperature dwell time
- Controls are separate from the press
- Available by lease only

Tag Marking

Allflex 2-in-1 Marking Pens

- One pen with two marking tips (fine and broad)
- Easy-to-hold and easy-to-use pump action
- Fade resistant black or white ink
- Specially formulated for use on Allflex ear tags



Allflex 2-in-1 Marking Pens

Product Code: PEN



Product Code: PEN-WHITE

TIPS FOR MARKING

1

Wipe tag surface clean with isopropyl (rubbing) alcohol.

2

Mark tag indoors in a well ventilated area at room temperature. Keep the internal valve partially open by applying slight, constant pressure on the tip.

3

Write numbers and letters slowly for heavy inking and durable marking. Insufficient ink will cause the markings to fade prematurely.

4

Mark at least two times, allowing for proper drying between markings for best results.

5

If possible, dry tags in a warm, sunny area as this enhances ink penetration. Allow mark to dry thoroughly before tagging animal.

Patented Laser-Ink Marking

- Laser-ink marking allows for greater visibility of management numbers in livestock applications
- The patented marking process is exclusive to Allflex
- The durable laser mark is guaranteed to last the life of the animal



Custom Identification



Allflex Custom ID is the Producer's Choice

- Your livestock management program may benefit from Allflex Custom ID
- Allflex offers permanent, customizable markings on premium quality 2-piece Global, Tamperproof™ and ATag™ one-piece tags with Laser and Laser-Ink Marking
- There are multiple customization options available giving you the flexibility to create something as simple or complex as you need
- Tag colors and marking options will vary depending on tag selection

Customize Your Information

- Producers can use a variety of information fields available on different tags to truly customize their identification
- Use identification to measure what matters on your livestock operation
- Custom ID tags can include:
 - Brands and other images
 - Combinations of letters and numbers including farm or ranch name and location
 - Reverse side markings on the back of the tag
 - Custom numbering that's tailored to your management program
 - Birth dates and years
 - Sire and dam information

Premium Black Tags

- Allflex Producer's Choice Custom ID™ includes premium black ear tags in three Global Tag sizes: Super Maxi Female, Maxi Female and Large Female
- The premium black tags feature permanent white Allflex laser marking
- Black Allflex Global Small Male Tags are available blank as a matching companion or to contrast with other Allflex Global Tag colors

Tag Applicators and Accessories



Universal Total Tagger

Product Code: APP-UTT

Universal Total Tagger

- A must for applying Allflex 2-piece Global Tags
- Also use to apply Allflex Tamperproof™ and EID Tags and most major brands of insecticide tags
- Deep jaw makes proper placement easier
- Grip is designed to ease hand fatigue from repeated use
- Replacement applicator pin located in handle
- Black Clip Included

Remove Black Insert for EID Application



Universal Total Tagger Black Insert

Product Code: CLIP-UTT-K

Universal Total Tagger Black Insert

- For use in Universal Total Taggers (Red and Green)
- Use to apply Allflex Global and Tamperproof™ Tags



Universal Total Tagger Pin

Product Code: PIN-UTT

Universal Total Tagger Pin (Red Blunt)

- For use in the Universal Total Tagger (Red)
- Use to apply Allflex Global, Tamperproof™ and EID Tags
- Can also be used with Global Retract-O-Matic™




Universal Total Tagger Pin

Product Code: PIN-PT

Universal Total Tagger Pin (Blue Blunt)

- For use in the Universal Total Tagger (Red)
- Use to apply Allflex Piglet Tags

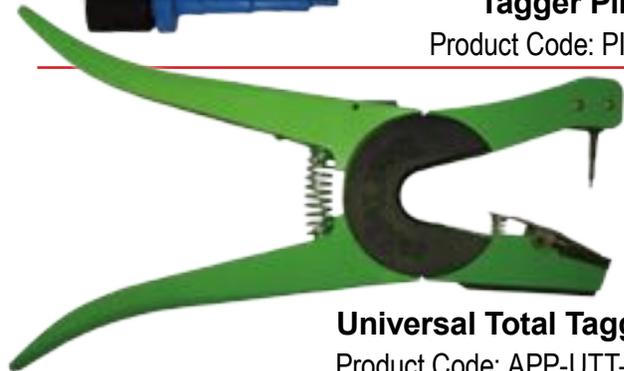

Universal Total Tagger +

Product Code: APP-UTT-PLUS

Universal Total Tagger + (with flip-pin feature)

- If animal pulls away during application the pin will flip forward
- Will apply all varieties of Allflex two piece tags
- Deep jaw makes proper placement easier
- Grip is designed to ease and fatigue from repeated use
- Replacement applicator pin located in handle




Universal Total Tagger+ Pin

Product Code: PIN-UTT-PLUS

Universal Total Tagger+ Pin (Black Blunt)

- For use in the Universal Total Tagger+ (Green)
- Use to apply Allflex Global, Tamperproof™ and EID Tags

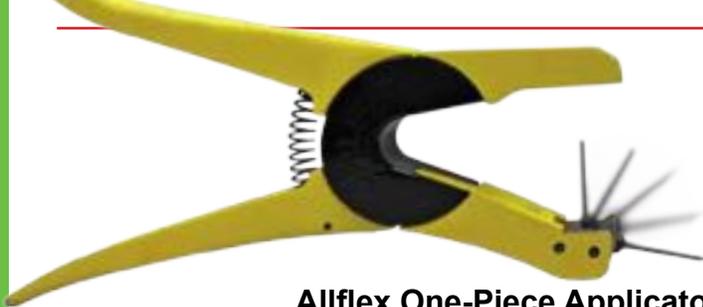

Allflex One-Piece Applicator

Product Code: APP-ATAG

ATag™ One-Piece Applicator

- For use with ATag™ One-Piece Tag
- Deep jaw makes proper placement easier
- Grip is designed to ease hand fatigue from repeated use
- Replacement applicator pin located in handle



Allflex One-Piece Applicator Pin

Product Code: PIN-ATAG

ATag™ One-Piece Applicator Pin (Black Smooth)

- For use in the ATag™ One-Piece Applicator
- Use to apply ATag™ One-Piece Tag

Tag Applicators and Accessories



Global Retract-O-Matic™

Product Code:
APP-RET-GLOBAL
(not shown actual size)

Global Retract-O-Matic™

- Retracts the pin out of the ear before the animal can react
- Automatic applicator
- Contoured pistol grip handle
- Excellent for tagging calves, sheep and goats
- Packaged complete with loaded red blunt pin and replacement pin
- Anvil can be positioned at any angle



EID Ultra Retract-O-Matic™

Product Code:
APP-RET-ULTRA

EID Ultra Retract-O-Matic™

- Applies High Performance (HDX) and Standard Performance (FDX) EID tags
- Retracts the pin out of the ear before the animal can react
- Contoured pistol grip handle
- Anvil can be positioned at any angle
- Uses red blunt pin
- Automatic applicator

NEW!



SKU: PIN-RET-DF

With the new specialty DF ROM Pin (Anodized Yellow), Destron Fearing tag customers can utilize the Allflex™ Retract-O-Matic™ for applying both Destron Visual and Electronic (EID) tags. The Allflex ROM's will ship with the standard Allflex Red Pin. The Destron ROM Pin is an accessory item that should be ordered separately to replace the Red Pin.



EID Conversion Kit
Product Code: EID-ANVIL-KIT

Retract-O-Matic™ Replacement Parts Ultra EID Conversion Kit

- Convert any Retract-O-Matic™ to apply High Performance and Standard Performance EID Tags
- Kit Includes:
 - Red anvil with special EID jaws
 - Special modified pin

Global Retract-O-Matic™ Pin

Product Code: PIN-RET-BASE



Universal Total Tagger Pin

Product Code: PIN-UTT



Global Retract-O-Matic Pin™

- Replacement pin for the Allflex Global Retract-O-Matic™ Universal Total Tagger Pin (Red Blunt)
- Use to apply Allflex Global Tags, Tamperproof™ and EID Tags



Allflex Safety Ear Tag Removal Tool

Product Code: KNIFE

Allflex Safety Ear Tag Removal Tool

- Hook blade design slips easily between base of male tag and animal's ear
- Safety hook design makes tool safe for both livestock producer and animal

Electronic Identification



**HDX Ultra EID Tag,
Extended Small Male**

Product Code: TFI-HDXOTP982-W/GESMW

High Performance Half Duplex HDX Ultra EID Tag

- HDX technology optimizes signal transmission and provides greatest possible read distance
- Tamperproof Ultra Cap™ provides ultimate security and retention
- ISO Compliant
- HDX Tag weight: 8 grams
- Packaged in quantities of 10, 20, 25, 50, 250 and 1000

**FDX Ultra EID Tag,
Extended Small Male**

Product Code: TFP-FDXOTP982-Y/GESMY



Standard Performance Full Duplex FDX EID Tag

- FDX technology
- Tamperproof Ultra Cap™ provides ultimate security and retention
- ISO Compliant
- FDX Tag weight: 9 grams
- Packaged in quantities of 20, 25, 50, 250 and 1000



Lightweight FDX EID

Product Code: TF-FDXOTP982LW -Y/GESMW

Standard Performance Full Duplex FDX Lightweight EID Tag

- FDX technology
- ISO compliant
- FDX Lightweight tag weight: 4 grams
- Packaged in quantities of 20, 50 and 250



B80

Product Code: B80-FDXOTP982-Y/GESM-Y-20



**HDX Reusable EID Tag,
Extended Small Male**

Product Code: SFI-HDXOTP982-Y/GESMY

HDX Reusable High Performance EID Tag

- HDX Technology
- ISO Compliant
- HDX Reusable Tag weight: 8 grams



**FDX Reusable Standard
Performance EID Tag,
Extended Small Male**

Product Code: RFP-FDXOTP982-Y/GESMY

FDX Reusable High Performance EID Tag

- FDX Technology
- ISO Compliant
- FDX Reusable Tag weight: 9 grams

Matched Pair Sets



Allflex All-in-One Tag
Product Code: AIO



Allflex All-in-One Tag
Product Code: AIOL

Allflex All-in-One

- Available in HDX (Half Duplex) and FDX (Full Duplex) Combines Allflex Maxi or Large visual tag with EID component
- Tamperproof Ultra Cap™ provides ultimate security and retention
- ISO Compliant
- All-in-One Tag comes in Maxi and Large sizes
- All-in-One Tag weights: HDX Maxi 17.0 grams, HDX Large 12 grams, FDX Maxi 18 grams, FDX Large 13 grams
- Two colors available: White (HDX only) and Yellow (FDX only)




HDX-Maxi Matched Set 28

Product Code:
HDXOTP982/GTXF-COLOR-SET28

EID-Visual Matched Sets

- Sets are available in combinations of HDX or FDX EID tags paired with Maxi or Large Visual tags (other visual tag combinations available)
- All tags have corresponding Laser-Link printed numbering
- Both tags feature the Tamperproof Ultra Cap™
- Tamperproof™ Maxi Tag size: 4" high x 3" wide
- Tamperproof™ Large Tag size: 3" high x 2 1/4" wide

Matched Set Tag Colors

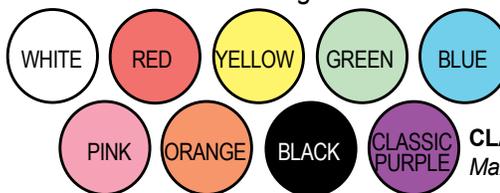

CLASSIC PURPLE available in Maxi and Large Female only.



FDX-Maxi Matched Set 18

Product Code:
FDXOTP982/GTXF-COLOR-SET18



HDX-Maxi Matched Set 17

Product Code:
HDXOTP982/GTXF-COLOR-SET17



HDX-Large Matched Set 3

Product Code:
HDXOTP982/GTLF-COLOR-SET3

[Additional Custom Matched Sets are available](#)

Official Tags



Large FDX

Product Code: USDA-FDX840/GTLF1-GSM



Maxi HDX

Product Code: USDA-HDX840/GTXF1-GSM



All-in-One FDX

Product Code: USDA840FDXAIO1-Y/GESM-Y



ATag™ Cow HDX

Product Code: HDX-840/ATAGX-COLOR-SET16

Animal Disease Traceability System AIN Tags

The ADT program is a mandatory, cooperative Federal-State-Industry program, providing a standardized information system for Federal and State animal-health authorities to use in responding to animal-disease events in the United States.

In order to obtain AIN tags, producers must first register their premises and obtain a premises identification number (PIN) from their state animal health authority. A database record of specific AIN tags distributed to each premises is maintained, so producers should not share or make their AIN tags available to other producers.

Producers may apply the AIN tags at their convenience and at the time most suitable to their operation, but before an animal leaves their premises.

Premise Number or LID is required to purchase 840 tags, these can be obtained from your State Department of Ag.

Recommended EID Tag Placement




Application site must be free of foreign debris prior to placement of tags on the animal. Review application instruction prior to tagging.

IMPORTANT: Caution, "Free Air Space" is critical for proper healing and retention. Inspect placement after tagging to ensure there is sufficient space between ear and EID tag.


FOR CATTLE

1. The EID tag should be placed in the middle of the ear between the two cartilage ribs close to the head.
2. The female portion of the tag should be on the inside of the ear with EID tag application. Note that this is a thicker part of the ear. Application may be more difficult than when applying a visual tag.

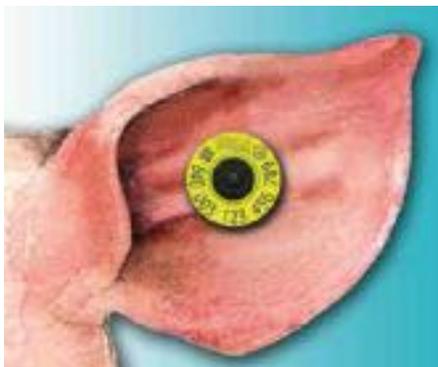

FOR SWINE

1. Place the EID tag in the middle or thicker part of the ear.
2. The male tag should be on the outside of the ear and the female (or EID tag) should be placed on the inside of the ear. Tag retention is improved when male tag lays flush against the back side of the ear.

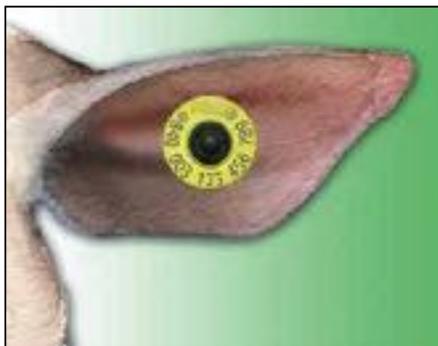

IMPORTANT: Tag application may vary based on breed type and ear size.

FOR SHEEP

1. Place the EID tag in between the cartilage ribs of the ear, near the first quarter of the ear (closest to the head).
2. The female portion of the tag should be placed on the inside of the ear.



Apply Allflex Electronic ID Tags with the Red Universal Total Tagger. Use the red blunt pin and remove the black insert from the base of the jaws.

Hooking the clip on a metal surface and pulling against it, is the best way to "pop" the clip out of the applicator.



**Universal Total Tagger
Black Insert**

Product Code: CLIP-UTT-K

Take care of your herd with **SCR ACTIVITY-RUMINATION MONITORING**



**REAL TIME REPRODUCTION AND HEALTH INSIGHTS.
REAL TIME CONNECTION AND CONTROL. ANYTIME, ANYWHERE.**



Health

- Identify sick cows **1 – 3 days sooner** than a physical evaluation*
- Minimize time spent watching for sick cows
- Determine and measure cow treatment using rumination data
- Reduce cow stress by lowering lock-up times

*Based on recent Cornell study, "Use of rumination and activity monitoring for the identification of dairy cows with health disorders"




Nutrition

- Monitor response to nutrition and ration changes, within and across groups
- Analyze effectiveness of feed additives
- Use individual cow data to detect health concerns
- Identify concerns regarding mixing and feed delivery
- NEW – within the day Group Rumination graph



Breeding

- Easy to use breeding lists with separate reports for '**Cows to Inseminate**' and '**Cows in Heat**' based on VWP
- An '**Hours to breeding**' column counts down to ovulation to help identify the optimum breeding window
- Reports for cystic, anestrus, and suspect for abortion provide earlier diagnosis and intervention of repro problems
- Superior heat detection due to proprietary algorithms using activity, rumination and other parameters
- Options to reduce hormone dependency 40 – 80 percent

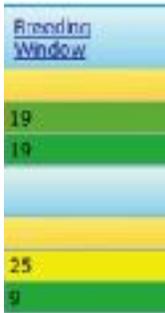

Heat Stress & Temperature and Humidity Index

- Displays the current status of **panting**, **rumination** and **eating** by group
- Monitors temperature and humidity for improved heat abatement strategies

HEALTHYCOW24® Mobile App

Full mobility – Stay connected - anytime, anywhere! Access your herd's data and check dashboards from a mobile device or computer, and get real-time alerts and reports.

Complete Herd Management

Add an SCR Sort Gate or Milking Controls System to activity and rumination monitoring for a complete solution to managing your dairy herd, all from one computer. Combined with the FreeFlow™ milk meter, the activity and rumination monitoring delivers usable, real-time, decision making data on individual cow and herd health.



NEW Wearables and Software

- Now available in either neck collars or ear tags
- Ask about our latest software upgrades



For more information:
Phone: 608-237-3170
www.scrdairy.com

Electronic ID Tag Readers

RS420 Stick Reader

60cm - Product Code:
RS420-60

45cm - Product Code:
RS420-45



Handheld EID Readers

Allflex RS420 Stick Reader

- Portable reader with cord-free capabilities
- ISO Compatible with both FDX and HDX technologies
- Internal battery, LCD read out and tag counter option
- Pro Kit available for both sizes: RS420-60-KIT
RS420-45-KIT

RS420 Enhancements

- High Contrast LCD
- Cable free Operation
- Internal Bluetooth
- Rechargeable 7.4 VDC Li-Ion Battery
- 100,000 ID Tag Storage (10,000 per session)
- Comes Standard with EID Tag Manager Software



RS420 Stick Reader "Pro Kit"

- Rugged hard-sided plastic case
- PW420 Replacement Battery Pack 7.4VDC
- EID Tag Manager Software

DTR5 Stick Reader

60cm - Product Code:
DTR5-60

45cm - Product Code:
DTR5-45



Destron Fearing™ DTR5 Stick Reader

- Portable reader with cord-free capabilities
- ISO Compatible with both FDX and HDX technologies
- Internal battery, LCD read out and tag counter option
- Pro Kit available for both sizes: DTR5-60-KIT
DTR5-45-KIT

DTR5 Enhancements

- High Contrast LCD
- Cable free Operation
- Internal Bluetooth
- Rechargeable 7.4 VDC Li-Ion Battery
- 100,000 ID Tag Storage (10,000 per session)
- Comes Standard with EID Tag Manager Software

NEW!

The New Allflex LPR Series Livestock Pocket Reader

- Portable
- Cable Free
- Internal Bluetooth
- Rechargeable 7.2 VDC NiMH battery pack



Indicators		
Disabled	Flashing	Fixed
Reader OFF	Reader is reading	Reader is ON
	Tag read	
Battery OK	Battery level getting low	Battery depleted Charge necessary
Bluetooth disabled	Blinking once every second: not connected (slave mode)	Bluetooth connected
	Blinking 5 times every 5 seconds: not connected (master mode) tried to establish a connection	



LPR Protective Cover

SKU: LPR-COVER

- Shock Resistant Cover
- Safety Strap
- Lightweight
- ISO 11784 & 11785 Compliant

Aleis FFW and Neck Bar Readers

Reading systems-Chuteside applications



Allflex SKU#: Aleis-FFW6000

Fixed Feedlot Wand (FFW)

- Designed to scan animals during processing at chute
- Viewable lights indicate when the device is turned on and in operation
- Flexible, retractable connection with removable wand
- Comes complete with External power supply
- No internal tag storage, sends RFID numbers direct to scale indicator, computer or handheld device with suitable software.
- Compatible with most major scales and software.
- Reads both FDX-B and HDX ISO 11784/11785 compliant EID products.
- Built to withstand the harshest of conditions.
- Also available with tag storage and “sync” capability in model Aleis-FFW8050



Allflex SKU#: Aleis-FFWNB9060

Neck Bars

- Designed to read cattle in chute
- Consists of two antennas mounted on the front of the chute
- Designed to read in the “HELD” position
- Includes a back-up wand-for improper positioned animals
- Storage of up to 100,000 RFID numbers
- External power supply
- Sends RFID numbers direct to scale indicator, computer or PDA
- Compatible with most major scales and software
- Reads both FDX-B and HDX ISO 11784/11785 compliant EID products.
- Designed specifically to handle chute reading conditions.

“FAST, ACCURATE AND EFFICIENT”

Aleis Panel Readers

Antenna System



Allflex SKU#: Aleis-8152BT

8152BT - Single Antenna System

- Designed for use in load in/out alleyways or on a scale system.
- The panel has an Auto-Tuning function.
- Includes Removable Reader Box w/Bluetooth & 1200x600x21 Antenna.
- Comes with (2) built in 12VDC batteries housed just below the control box for remote usage.
- Visual Screen and Keypad allow the user to view tag data and change reader settings as needed.
- This unit will store up to 100,000 individual Electronic ID numbers and can be configured to compare EID numbers and send an Alert when a specific number is scanned.
- Reads both FDX-B and HDX ISO 11784/11785 compliant EID products
- Reader includes Battery Charger, Data lead, USB Adapter, and User's Manual.



Allflex SKU#: Aleis-9162BT

9162BT - Single Antenna System

- Designed for use in load in/out alleyways or on a scale system.
- The panel has an Auto-Tuning function.
- Includes Removable Reader Box w/Bluetooth & 1200x600x21 Antenna.
- Comes with (2) built in 12VDC batteries housed just below the control box for remote usage.
- Visual screen and QWERTY keypad allow the user to view tag data, input data in up to four configurable fields and change reader settings as needed.
- This unit will store up to 100,000 individual Electronic ID numbers and can be configured to Compare EID numbers and send an alert when a specific number is scanned.
- Reads both FDX-B and HDX ISO 11784/11785 compliant EID products
- Reader includes Battery Charger, Data lead, USB Adapter, and User's Manual



Allflex SKU#'s: Aleis-Multi A and Aleis-Multi B


Dual Panel Antenna Systems

- Designed for "High Volume" load-in and load-out of animals
- Two antennas, 1200x600x21mm or 900x450x21mm
- External power supply
- Sends RFID numbers direct to scale indicator, computer, hand held device or sent to remote data storage box.
- Compatible with most major scales and software.
- Reads both FDX-B and HDX ISO 11784/11785 compliant products

All panel antennas require a site survey from our sales staff or technical department and are installed by our technical team.

Managing EID Data

The Allflex EID Tag is a crucial part of an electronic identification system. As such, the tag is simply the first of four elements needed for complete data collection and management. Data collection systems are varied and constantly evolving. They typically include:

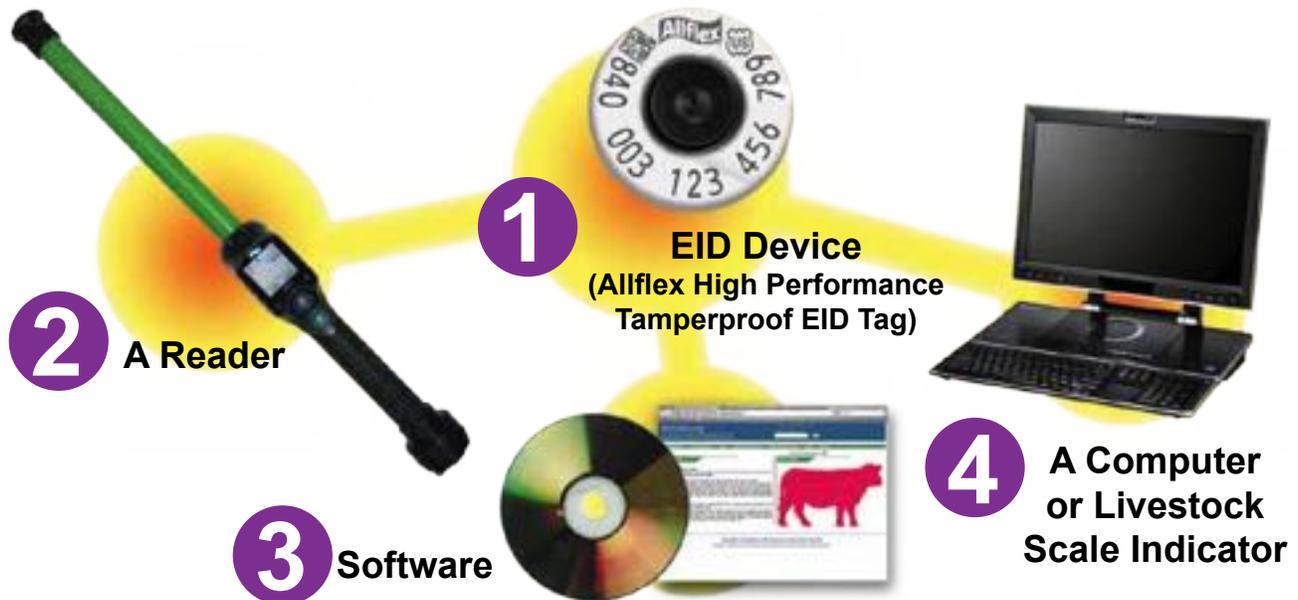

EID Tag Manager software can be downloaded on our website at www.allflexusa.com



Allflex EID Tag Manager Software allows the Allflex Reader user to manage basic reader functions and download EID tags

- To manage an Allflex Reader connected to a PC thru serial ports, USB to Serial or Bluetooth connection
- To download tag data stored in an Allflex Reader and save the file in Excel or Word documents
- To use EID tag manager as a wedge program to scan EID numbers directly into Excel, Word or other application
- To reduce data entry when associating EID numbers with management numbers by using web link to download EID tag numbers

EID Tag/TSU Number Look Up

Easy Steps Tag/TSU • Lookup User's Guide

Finding Your Tag/TSU Numbers

Step 1. Navigate to www.allflexusa.com and Find Tag or TSU Numbers.




Step 3. You may also enter **Multiple Bag#s**. Hit <enter> between the bag#s or copy and paste a list from a text or Excel file

Step 4. Click on Lookup

Step 5. The numbers you entered will show **green** on the grid after you click on Lookup, as shown
You are now ready to download your numbers
You can expand the **green** rows and see details by clicking on the plus sign
Only rows selected in **green** will be downloaded

	Bag#
+	1000029338
+	1000029349
+	1000029350
+	1000029361
+	1000029372
+	1000029383

Step 2. Locate the Master#, Pallet#, Case#, Bag# or Tag# on labels as shown and enter them individually

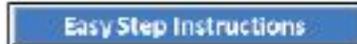

Enter Master#, Pallet#, Case#, Bag# or Tag# or enter multiple bag numbers.

Master#, Pallet#,
Case#, Bag# or Tag#

C1000228330

Multiple Bag #s

- 1004374780
- 1004374791
- 1004374805
- 1004374816
- 1004374827

Lookup



* = **Bag(s) Not Found**

Master#, Pallet#,
Case#, Bag# or Tag#

Multiple Bag #s

- 1000029338
- 1000029349
- 1000029350*
- 1000029361
- 1000029372

Lookup

Bag(s) Not Found
Bag(s) Not Found are marked with an * in the list. You can fix the entry and re-submit by clicking Lookup and/or proceed with the selection

Downloading Your Tag/TSU Numbers

Step 6.

Select the file type and format in which you would like your numbers to be saved.

CSV = comma separated value
XLS = Excel spreadsheet
XML = web document

Select File Type and
Format and Click
Download



The selected format contains:
Bag#, Eid#, Mgmt#, Reg#

Download


Step 7.

Click download and open or save to your computer


Internet Explorer:



Chrome:

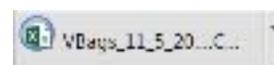

Tissue Sampling Products

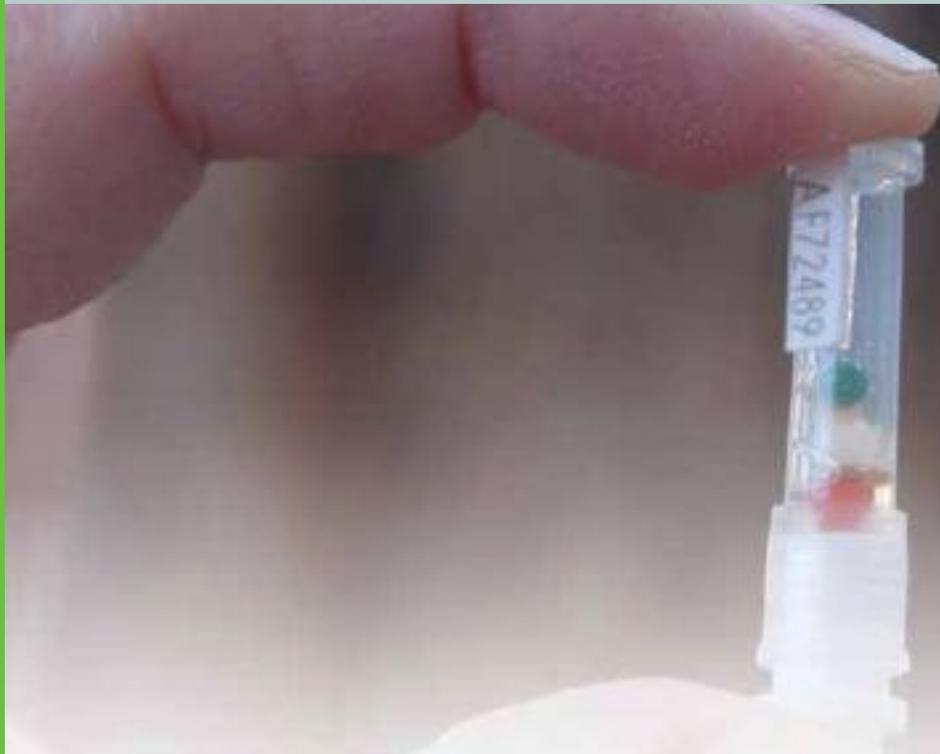

Allflex – Tissue Sampling Technology

Collecting tissue samples has never been more efficient and cost effective. Scientific advancements in the mapping of livestock genomes along with continued development of affordable analytics has changed the sampling industry – making it easier and quicker for producers to use DNA for:

- Parentage verification
- Genetic selection
- BVD diagnostics



- Fast, high performance sample collection ... Samples can be collected in seconds with minimal animal restraint. A single-squeeze motion collects a sample with minimum distress to the animal.
- Clean, uncontaminated sampling ... The genetic material is sealed in a specially designed preservative.
- Visual, DNA-sample identification ... Instant confirmation of on-farm sampling success. No more guessing whether enough genetic material has been gathered.
- Minimize retesting ... Tissue samples contain a large quantity of high quality DNA for genetic analysis yielding excellent lab results.



Tissue Sampling Applicator
SKU: APP-TSU

Tissue Sampling Unit-Box of 10
SKU: TSU-6860003-NBR



Tissue Sampling Products

Tissue Sampling Layouts



Tissue Sample Unit with Global Maxi & Small Male

SKU: TSU-GXF58/GSM-COLOR-SS



Tissue Sample Unit with HDX Tamperproof Maxi Matched Set

SKU: TSU-HDX-840/GTXF-COLOR-SET22



Tissue Sampling Unit with HDX Tamperproof Maxi & Large Male Matched Set

SKU: TSU-HDX840/GTXF1-GLM1-COLOR

Tissue Sample Unit with HDX ATag™ Cow Matched Set

SKU: TSU-HDX840/ATAGX-C-SET17



[More options available](#)

Precision Instruments

EM Syringes



2EM

(Adjustable dosage from .25ml to 2ml)

Product Code: 2EM



5EM

(Adjustable dosage from .5ml to 5ml)

Product Code: 5EM

2EM & 5EM Tube Fed Syringes

- Accurately delivers selected dose
- Easy V-grip for high volume use
- Metal Luer Lock tip
- Removable barrel for cleaning
- Durable plastic design
- Amber-colored barrel and tubing reduce UV sunlight exposure



LD.3EM-BT

(Adjustable dosage from .1ml to .3ml)

Product Code: LD.3EM-BT

2EM-BT

(Adjustable dosage from .25ml to 2ml)

Product Code: 2EM-BT

5EM-BT

(Adjustable dosage from .5ml to 5ml)

Product Code: 5EM-BT

LD.3EM, 2EM & 5EM Bottle Fed Syringes

- Automatic self filling with bottle attachment
- Heavy-Duty Bottle Cage for bottle protection (50ml & 100ml bottles only)
- Accurately delivers selected dose
- Easy V-grip for high volume use
- Metal Luer Lock tip
- Removable barrel for cleaning
- Durable plastic design
- Amber-colored barrel reduces UV sunlight exposure

2EM-BT-UBA

(Adjustable dosage from .25ml to 2ml)

Product Code: 2EM-BT-UBA-GRAY

5EM-BT-UBA

(Adjustable dosage from .5ml to 5ml)

Product Code: 5EM-BT-UBA-GRAY



2EM & 5EM Bottle Fed Syringe with Universal Bottle Adapter

- Automatic self-filling with universal bottle adapters
- Five Color coded "Universal Bottle Adapters" included
- Universal bottle adapters enable multi size bottles to fit on the syringe
- Metal Luer Lock Tip
- Removable barrel for cleaning
- Durable Plastic Design
- Amber Colored Barrel reduce UV sunlight exposure

Universal Bottle Adapters



Precision Instruments

Repeater Syringes



25MR2 & 50MR2

- Accurately delivers selected dose
- Easy grip for high volume use
- Barrel and needle attachment are fully autoclavable
- Streamlined design with fewer replacement parts
- Amber-colored barrel reduces UV sunlight exposure
- Color Knob Pack available to differentiate between medications

SPECIAL FEATURE

Color Code Injection Accuracy System

Interchangeable colored knobs let you dedicate a particular syringe to a selected vaccine or therapeutic compound to ensure proper administration and avoid mistakes.



25MR2

(Adjustable dosage from .5ml to 2.5ml)

Product Code: 25MR2



50MR2

(Adjustable dosage from 1ml to 5ml)

Product Code: 50MR2



LR-BARREL

The LR Barrel is designed for use with extended release deworming products that require a specialized plastic barrel.



NEW!

SGNOZZLE/BARREL
Sheep & Goat Drench Barrel

SYRINGE/SPECIES SELECTION GUIDE

Livestock Type	Draw-Off Injection Syringes							Bottle Feed					Drencher				Repeater	
	2EM	5EM	1UM-T	2UM-T	5VM	10VM	20VM	2UM	5FM	.3EM-BT	2EM-BT	5EM-BT	10VM	20VM	70ml	200ml	25 MR2	50MR2
CALVES STEERS COWS	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
BABY PIGS PIGS SOWS	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
EWES LAMBS	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
POULTRY TURKEYS			•	•	•			•	•	•	•							
			•	•	•			•	•	•	•							

Precision Instruments

UM Syringes

1UM-T

(Adjustable dosage from .1ml to 1ml)

Product Code: 1UM-T

2UM-T

(Adjustable dosage from .1ml to 2ml)

Product Code: 2UM-T



2UM Tube Fed Syringe

- Automatic self-filling tube feed
- Adaptable to bottle feed
- Accurately delivers selected dose
- Ergonomic grip for comfort
- Steel plunger (no O-ring) with precision glass barrel
- Adjustable pin-lock handle design

1UM

(Adjustable dosage from .1ml to 1ml)

Product Code: 1UM

2UM

(Adjustable dosage from .1ml to 2ml)

Product Code: 2UM



1UM & 2UM Bottle Fed Syringes

- Heavy Duty Bottle Cage for Bottle protection (50ml or 100ml bottles only)
- Adaptable to tube feed
- Accurately delivers selected dose
- Easy grip for high volume use
- Steel plunger (no O-ring) with precision glass barrel
- Adjustable pin-lock handle design

5UM-BT/T

(Adjustable dosage from .5ml to 5ml)

Product Code: 5UM-BT/T



5UM-BT/T Automatic Syringe

- 5ml Automatic Self Filling Syringe
- Adaptable as a tube feed syringe or bottle top syringe
- Steel Plunger (no O-ring) with precision glass barrel
- Adjustable Pin-Lock handle design for easy conversion
- Heavy Duty Bottle Cage for Bottle protection (50ml & 100ml bottles only)

Draw off Syringes



5VM Draw Off Injection Syringe

- Automatic self-filling tube feed
- Accurately delivers selected dose
- Easy grip for high volume use
- Piston and O-ring plunger
- Amber-colored barrel and tubing reduce UV sunlight exposure



5VM

(Adjustable dosage from .5ml to 5ml)

Product Code: 5VM

10VM & 20VM Draw Off Injection Syringes

- Automatic self-filling tube feed
- Designed to be used as an injector or drencher
- Accurately delivers selected dose
- Easy V-grip for high volume use
- Easy to adjust handle tension for improved performance
- Durable metal and plastic design
- Double O-ring piston
- Easy-to-clean external valves and removable piston shaft
- Amber-colored barrel and tubing reduce UV sunlight exposure



10VM

(Adjustable dosage from .5ml to 10ml)

Product Code: 10VM-S

20VM

(Adjustable dosage from 1ml to 20ml)

Product Code: 20VM-S

10ml, 20ml & 50ml Nylon Syringes

- Durable nylon barrel with metal push rod and piston
- Easily adjustable for a range of dosages



10ml Nylon Syringe

(Adjustable dosage from 1ml to 10ml)

Product Code: TU MASTERLINE-10ML

20ml Nylon Syringe

(Adjustable dosage from 1ml to 20ml)

Product Code: TU MASTERLINE-20ML

50ml Nylon Syringe

(Adjustable dosage from 5ml to 50ml)

Product Code: TU MASTERLINE-50ML

Precision Instruments

Multi-purpose Dosing Instruments

12.5ML, 30ML, 70ML Luer Tip Injector, 5.5" Drencher Nozzle, Pour on Tip

- Automatic self-filling syringe
- Easy set dial-a-dosage with easy view dosage window
- Tips included for Injector, Drencher and Pour On applications
- Removable barrel for cleaning
- Replaceable front valve and spring with lock-in-place feature
- Durable Plastic Design
- Easy V-grip for high volume use
- Amber Colored Barrel reduce UV sunlight exposure



12.5EM-SDP

(Adjustable dosage from .5ml to 12.5ml)

Product Code: 12.5EM-SDP



30EM-SDP

(Adjustable dosage from 5ml to 30ml)

Product Code: 30EM-SDP



70EM-SDP

(Adjustable dosage from 7.5ml to 70ml)

Product Code: 70EM-SDP

Drenchers



10VM Drencher

(Adjustable dosage from .5ml to 10ml)

Product Code: 10VM-D

20VM Drencher

(Adjustable dosage from 1ml to 20ml)

Product Code: 20VM-D

10VM & 20VM Drenchers

- Automatic self-filling tube feed
- Designed to be used as an injector or drencher
- Accurately delivers selected dose
- Easy V-grip for high volume use
- Easy-to-adjust handle tension for improved performance
- Durable metal and plastic design
- Double O-ring piston
- Easy-to-clean external valves and removable piston shaft
- Amber-colored barrel and tubing reduce UV sunlight exposure



70ml Drencher

(Adjustable dosage from 10ml to 70ml)

Product Code: UKAL-70ML

200ml Drencher

(Adjustable dosage from 10ml to 200ml)

Product Code: UKAL-200ML

70ml & 200ml Drenchers

- Durable barrel with metal push rod and piston
- Dosage calibrations controlled by distal screw
- Easy-to-use grip



Back Pack

Back Pack

2.5 Liter Back Pack

Product Code: BACK25

5 Liter Back Pack

Product Code: BACK5L



Draw Off Color Coded Caps

20mm (white): Product Code: HD20W

30mm (blue): Product Code: HD30B

33mm (green): Product Code: HD33G



Product Code: SE17

Injection Bar for Swine

- Allows for increased distance to breeding animals
- Enhances user safety
- Reduce user exposure to crates and gating
- Time saving for mass vaccinations
- Long lasting strong and durable Carbon-metal design
- Heavy metal luer needle lock
- Kink protection for tubing
- Ergonomic and light weight
- Optimized for use with Allflex syringe line

Precision Instruments

Instrument Care

Care and Use

USING A TUBE FED SYRINGE

To attach a medication reservoir:




Attach one end of the amber tube to the syringe/drencher



Option 1: Attach the other end of the amber tube to the selected draw off cap



Option 2: Attach the other end of the amber tube to the 2.5 liter backpack

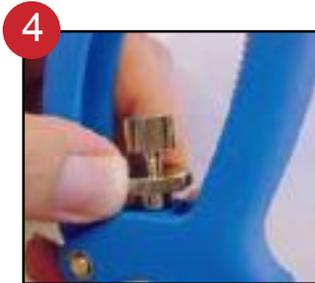

Loosen dose adjustment lock nut



Turn dosing adjustment screw to set the required dosage. Retighten lock nut



Handle spring pressure can be adjusted for comfort and tension

Frequently Asked Questions

Q Which models can be used as either a drencher or injection syringe?

A Allflex models 10VM and 20VM convert from injection syringes to drenchers. A drencher nozzle or needle holder is all that is required to make the conversion.

Q How do I sterilize my syringes?

A You can sterilize the most Allflex precision syringes by boiling the syringe, feed tube and draw-off cap at least 20 minutes. Suspend the items in the boiling water to prevent damage if the water boils away. Follow detailed directions on the actual syringe instruction sheet included with the syringe model you are using. Do not boil the 70ml Drencher (UKAL-70ml) or the 200ml Drencher (UKAL-200ML).

Q Can I use alcohol to sterilize my syringes?

A No. Alcohol damages the rings and valves in the syringe.

Q What size of needles should I use with the Allflex syringes?

A Needle size is determined by the species you are injecting and the injection site. All standard livestock needles can be used with Allflex syringes. If you have questions about which size needle to use, consult your local veterinarian.

Q Can I repair the syringe myself?

A Your Allflex dealer has repair and replacement parts available. Take special care to lay parts out on a clean white cloth for visibility, and replace parts exactly in the order they were removed.

Q How do I maintain and lubricate my syringe?

A To maintain the O-rings and valves, periodically lubricate the syringe with a small amount of olive oil or vegetable oil. Note: Do not use mineral oil, silicone, WD40, glycerin or alcohol. Petroleum-based products harden the rubber rings and valves, reducing the life of the components.

Allflex added Destron Fearing™ to our product line in 2012 to diversify our business with a proven brand and product. Look for Destron Fearing products at your local animal health store, distributor, catalog, online retailer or veterinarian.

Identify. Profit.

In 1945 Destron Fearing™ created the country's first commercially marketed visual identification tags for livestock. This is the foundation of today's animal identification solutions for producers worldwide.

Destron Fearing™ continues its tradition of leadership by manufacturing a range of innovative visual and electronic identification products, helping livestock producers reliably identify their animals and better manage their operations.

Panel Tags

Rugged, lightweight and available in a variety of fade-resistant colors, Destron Fearing™ panel tags are designed for superior retention, all weather performance and easy application when used with the ProGripII™ Universal Tag Applicator.

Custom Tags

Custom marking is available including Logos, Lines of Text and reverse side marking. Customized brands and images can be produced with a provided image.

Premium Performance RFID

Our e.Tags® are designed to provide optimal read range and superior cold weather application. Each contains a passive, ISO-compliant (134.2 kHz) RFID transponder encoded with a 15-digit identification number that can be read in millisecond by any Destron Fearing™ or ISO-compliant reader.

Dark & Durable Marking

Dark & Durable™ tag marking begins with the Destron Fearing laser mark that is etched into the tag surface using a computer guided laser beam resulting in a dark gray mark. The laser mark is then overlaid with black ink resulting in bold, black numbers.



INFECTA+GUARD® Infecta+Guard™ included on all stock tags.

Questions

Call 1-800-328-0118 or email customerservice@destronfearing.com



Destron Fearing™
by Allflex

www.destronfearing.com



Reader and Accessories



Leg Bands

SKU: AC7003**



DTR5 Reader

SKU: DTR5-60/45



Super Mark Pen™

SKU: AC7001



E-Z Knife™

SKU: AC7004



ProGripII™ Applicator

SKU: AC7066

** = Leg Band Colors:

01 = Orange, 02 = Yellow, 05 = Red,

06 = Blue, 07 = Green, 14 = Neon Orange,

15 = Neon Yellow, 16 = Neon Green, 17 = Neon Pink

Introducing

MASTERLINE SYRINGES FROM DESTRON FEARING™



50ROUX-DF ROUX REVOLVER 50ML SYRINGE

- Proven Pistol Grip Design
- Durable Metal construction with a glass barrel
- High quality for long service life

2FGRIP-BT/T BOTTLE MOUNT/TUBE FEED 2ML INJECTOR SYRINGE

- Automatic self-filling syringe with luer lock tip
- F-Grip design for high volume use
- Adaptable for bottle or tube feed configurations



High Quality Animal Management Tools from Destron Fearing



6VGRIP-BT/T

(Bottle Top Shown)

BOTTLE MOUNT/TUBE FEED 6ML INJECTOR SYRINGE
(Dosage: .5ml to 6ml)



12.5VGRIP-BT/T

(Luer Shown)

BOTTLE MOUNT/TUBE FEED 12.5 ML INJECTOR SYRINGE
(Dosage: 1ml to 12ml)



30VGRIP-D

(Drencher Shown)

BOTTLE MOUNT/TUBE FEED 30ML DRENCHER
(Dosage: 4ml to 30ml)

- Automatic self-filling syringe with luer lock tip
- Easy V-Grip design with soft comfort grips for high volume use
- Easy set dial-a-dosage with easy view dosage window
- Adaptable bottle Feed or Tube Feed Configurations.
- Removable plastic barrel for cleaning
- Replaceable front and rear valve
- Unique Spring Adjustor for custom handle tension for different medication viscosity
- Minor Maintenance Kit (6VGRIP-SK) included with each syringe
- Available in 3 sizes: 6ML Syringe, 12.5ML Syringe and 30ML Drencher

BOTTLE HOLDERS

- Constructed of premium quality Neoprene
- Hanging/Belt and Arm models available
- Designed to fit and protect medicine and vaccine bottles
- Prevents or reduces vaccine temperature fluctuations
- Protects glass bottle from outside impact
- Shields vaccine from harmful UV lights
- Easy and comfortable use
- Built in Needle holders from convenience
- Three sizes available: Small, Medium and Large

(Small: 100/25ml, Medium: 250/500ml, Large: 500/1000ml)



SKU's: HSW-BH-ARM SMALL
 HSW-BH-ARM MEDIUM
 HSW-BH-ARM LARGE
 HSW-BH-BELT SMALL
 HSW-BH-BELT MEDIUM
 HSW-BH-BELT LARGE

Destron Fearing™



Extra Large Female
3" x 4 5/8"
SKU: XLSET



Extended Female
2 1/2" x 4"
SKU: EXTSET



Medium Female
1 3/4" x 1 7/8"
SKU: MDSET



Large Female
2 1/4" x 2 3/4"
SKU: LGSET



Large Male
2 1/4" x 2 3/4"
SKU: LGSTPAN

Official USDA Swine Premises Tags
SKU: SWPTSET**06D * = Color Code

Hog Max
2 1/8" x 1 1/2"
SKU: HMSET



Front



Tamper Proof Button



Back



- Culls sows and boars required to have a PIN tag
- PIN of last farm required

NEW!



ESF80 - FDX Technology

1.2" Diameter

SKU: ESF80BTN02L

Tag weight: 9.07 grams



SW50 - FDX Technology

1.0" Diameter

SKU: SW50SET

Tag weight: 3.8 grams



e.Tag™ - FDX Technology

1.2" Diameter

SKU: ANESET

Tag weight: 9.18 grams

Available Colors & Codes



Black = 08

Green = 07

Blue = 06

Purple = 04

Red = 05

Orange = 01

Yellow = 02

White = 03

Pink = 00

Neon Green = 37



Extra Large Choice Set

3" x 4 5/8"

SKU: ANXLCHSET



HD.tag™ - HDX Technology

1.2" Diameter

SKU: ANHDSET

Tag weight: 8.0 grams



*** Some colors are not available in all tag sizes. Please contact customer service for more information.**



Sheep & Goat

2" x 7/8"

SKU: SGSET



Litter Max²

1 1/4" x 1 1/4"

SKU: LM2SET



Standard Round

1 1/8" Diameter

SKU: RHGSET



Destron Fearing™
by Allflex



Animal Intelligence, For Life™



www.allflexusa.com

Allflex USA, Inc.

P.O. Box 612266
Dallas/Fort Worth Airport, TX 75261-2266
(800) 989.TAGS

Allflex Canada

4135 Bérard
St-Hyacinthe, QC J2S 8Z8
(866) 505.TAGS



Destron Fearing™

800.328.0118
www.destronfearing.com



SCR

608.237.3170
www.scrdairy.com



SKU#ARC0114